

Important: Read all instructions prior to installation.

LED Flood Light

Safety and Notes

- Product should be installed and serviced in accordance with applicable national, state, and local building and electrical codes.
- To reduce the risk of electric shock, ensure that the main power source and circuit breakers are switched off before performing any installation or wiring procedures.
- Avoid looking directly into lamp when illuminated.
- Ensure all mounts are securely attached and will support the weight of the fixture. Failure to properly support fixture may result in damage or injury, for which the manufacturer does not assume responsibility.
- Photocell equipped models will turn the light on when ambient light falls below 30 lux, and turn off when ambient light exceeds 45 lux again.




FLL-AW50K50-D30

Specifications

Model	FLL-AWxK29-x30	FLL-AWxK50-x30
Operating Temperature	-40°–122° F (-40°–50° C)	
Environmental Rating	IP65	

Check product label for specific electrical specifications related to installation. Improper installation will void warranty.

Wiring Diagram

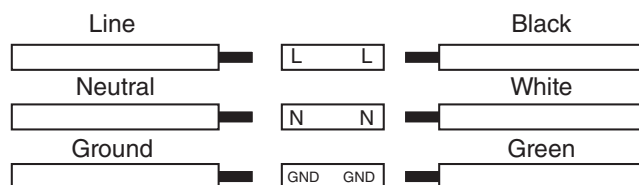

Installation Instructions (Knuckle Mount)

1. Open junction box and run wiring into box.
2. Securely mount light to junction box. Use sealant to create weatherproof seal.
3. Connect wiring.
4. Replace junction box cover.
5. Rotate light head to desired angle and tighten adjustment screw.

