

## **User Manual**

Important: Read all instructions prior to installation.

## **SWL Forklift Lights**

## **LED Forklift Lights and Installation Kits**

### **Products**







SWL-B6-OA



SWL-B12-O4



SWL-B11-O4



SWL-B20-SFA



SWL-R18HO-RL, SWL-R18HO-BL



SWL-R20-SFA



SWL-R6-L, SWL-B6-L

#### **Included Parts**

Model	Available Light Color(s) and Patterns	Mounting Hardware Included	Installation Location	Accessory Installation Kit	Voltage
SWL-x10-AB	red (R), green (G), or blue (B), arc pattern beam	mounting bracket, hardware kit <sup>1</sup>	front or rear	SWL-KIT-SINGLE <sup>2</sup>	12–60 VDC
SWL-B6-OA	blue, arrow pattern beam	mounting bracket, hardware kit <sup>1</sup>			
SWL-B12-O4	blue, 4° square beam	mounting bracket, hardware kit <sup>1</sup>			
SWL-B11-O4	blue, 4° square beam	mounting bracket, hardware kit <sup>1</sup>			
SWL-x20-SFA	red (R) or blue (B), arrow pattern beam	mounting bracket, hardware kit <sup>1</sup>			
SWL-R18HO-RL	red, line pattern beam	mounting brackets, hardware kit1	side	SWL-KIT-DOUBLE <sup>2</sup>	
SWL-R18HO-BL	blue, line pattern beam	mounting brackets, hardware kit1			
SWL-R6-L	red, line pattern beam	mounting brackets, hardware kit1			
SWL-B6-L	blue, line pattern beam	mounting brackets, hardware kit1			

<sup>&</sup>lt;sup>1</sup>Hardware kit includes screws/nuts required to mount light to existing bracket/structure.

### **Accessory Installation Kits**

#### SWL-KIT-SINGLE

(for one front/rear light with one mounting point)

- 1 magnetic mounting base
- 1 2 A fuse
- 1 fuse holder
- 1 male DT pigtail connector
- 1 female DT pigtail connector
- 10 cable ties
- 6 cable tie mounting bases
- 20 ft 18-gauge two-conductor power wire

#### SWL-KIT-DOUBLE

(for one side light with two mounting points)

- 2 magnetic mounting bases
- 1 2 A fuse
- 1 fuse holder
- 1 male DT pigtail connector
- 1 female DT pigtail connector
- 1 3-terminal lever-lock quick connector
- 10 cable ties
- 6 cable tie mounting bases
- 20 ft 18-gauge two-conductor power wire

### **Safety and Notes**

- Product should be installed in accordance with all applicable safety and electrical codes.
- Due to risk of electric shock, ensure that the main power source is switched off before performing any installation or wiring procedures.
- Failure to properly secure the light during installation may cause damage or injury, for which the manufacturer is not responsible.





<sup>&</sup>lt;sup>2</sup>Kit is for installation of single light.

# superbrightleds.com

## **User Manual**


Important: Read all instructions prior to installation.


## **SWL Forklift Lights**

## **LED Forklift Kit**

### **Installation Instructions**


SWL-B6-OA, SWL-B11-O4, SWL-B12-O4, SWL-x20-SFA Instructions (SWL-B27-R9 mounts similarly but uses an integrated bracket)

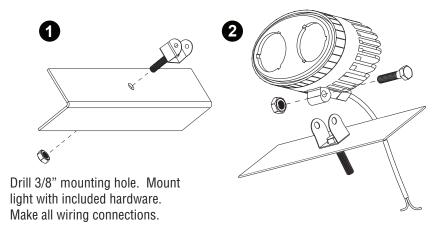

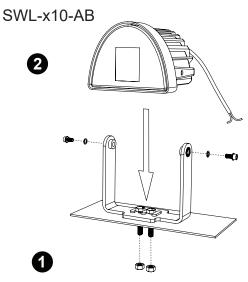

Drill 3/8" mounting hole. Mount light with included hardware. Make all wiring connections.

### SWL-R18HO-RL Instructions

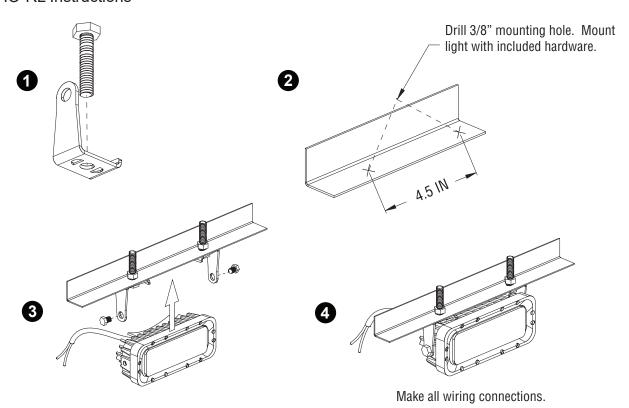








# **User Manual**

Important: Read all instructions prior to installation.

# **SWL Forklift Lights**

## **LED Forklift Kit**

**Wiring Diagram** 

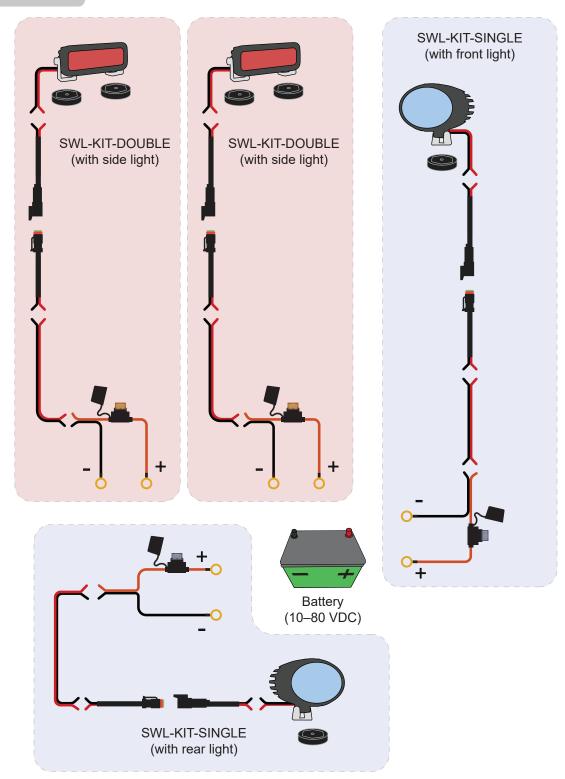








**User Manual** 

**SWL Forklift Lights** Important: Read all instructions prior to installation.

## **LED Forklift Kit**

Wiring Diagram (Alternate Front/Rear)

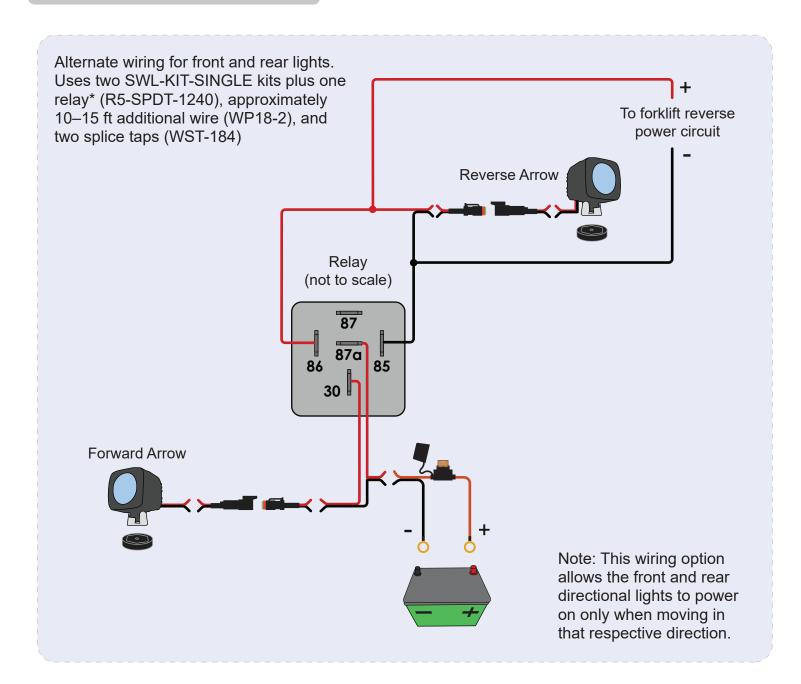

\*Relay coil voltage must match reverse power circuit voltage. Optional relay (R5-SPDT-1240) only works with 12 VDC power. This relay is not compatible with other voltages.



