# superbrightleds.com

Important: Read all instructions prior to installation.

# LED Low Voltage Well Light

#### **Safety and Notes**

- · For use with OUTDOOR, low-voltage landscape lighting systems ONLY.
- NOT FOR USE with submersible or pool/spa equipment.
- Do not submerge in water, the product can be damaged.
- This light fixture is only suitable for a 12~15 Volt AC or DC power supply.
- Use landscape wire: SBL Product #: WP14-2DB or WP12-2DB

#### **Recommended Accessories**

SBL Part No.	Description
*WWN-2212	Silicone Filled Wire nut
SFT-20	Self Fusing Silicone Tape
WP14-2DB	14 Guage Landscape Wire
WP12-2DB	12 Guage Landscape Wire

\*Note: Cutting quick connects will not void warranty. Product exchange only.

#### Power Load Guide

Power Supply Wattage @ 12 VAC	Max Fixtures
20 W	3
50 W	7
100 W	14
200 W	29

## **Trouble Shooting**

Problem	Possible Cause	Solution
Fixture does not light	<ol> <li>There is no power to 12V power supply.</li> <li>The quick connector does not make con- tact with wires.</li> <li>The primary land- scape wire is not connected to 12V power supply.</li> <li>There is a discon- nection in primary landscape wire.</li> <li>Minimum load not exceeded.</li> </ol>	<ol> <li>Check the outlet to 12V power supply and ensure that a breaker or GFCI circuit has not been tripped.</li> <li>Check the wiring of quick connector that it is screwed tightly, piercing through wire insulation to make solid contact with wire conductors.</li> <li>Check primary landscape wire connection to 12V power supply.</li> <li>Follow wires from fixture to 12V power supply to ensure a continuous run and/or follow wires between problematic fixture and working fixture.</li> <li>Ensure that your power supply does not have a minimum load requirement. Consult the power supply specifications or manual.</li> </ol>
Light flickers (one fixture)	<ol> <li>There is a loose connection with quick connect on primary landscape wire.</li> </ol>	<ol> <li>Tighten quick connects, and ensure contacts are pierc- ing through wire insulation to make solid contact with wire conductors.</li> </ol>
Light flickers (all fixtures)	<ol> <li>There is a loose con- nection to 12V power supply.</li> <li>Minimum load not exceeded</li> </ol>	<ol> <li>Disconnect power to 12V power supply and ensure pri- mary landscape wire connections are securely fastened and not in contact with other wire.</li> <li>Ensure that your power supply does not have a minimum load requirement. Consult the power supply specifications or manual.</li> </ol>
All or some lights are dim	<ol> <li>Maximum capacity of 12V power supply has been exceeded.</li> <li>Recommended dis- tance per landscape wire guage exceeded.</li> </ol>	<ol> <li>Check for other lights or other load on same system and/or increase 12V power supply wattage.</li> <li>Increase primary landscape wire gauge size to recom- mended guidelines.</li> </ol>

For superbrightleds.com technical help call 866-590-3533 or use our online chat service

## **User Manual**

Part Number:

## GL-WW3-120



### Instructions

- 1. Lay fixtures out as they will be installed.
- 2. Run landscape wire (WP14-2DB or WP12-2DB available at superbrightleds.com) from 12V supply past each light. Wire must be within 8" of fixture to allow power connections to be made.
- 3. Use quick connects supplied with each fixture to connect each light to the landscape wire.



Landscape Wire

4. Use a shovel to dig a small hole slightly larger than the diameter of the well light. Place the light into the hole to the depth desired. Fill in the open space around the light with the excess soil removed.



- 5. Turn on 12V supply and ensure all fixtures are working. It is recommended to wrap all connections in electrical or self-fusing tape (available at superbrightleds.com).
- 6. Bury landscape wire, fixture pigtails and connectors. A depth of 3" is recommended (6" maximum). Wires and connectors can also be covered by mulch or stone.

