



H4/H7

Remove socket adapter.

Install and secure socket adapter with housing.

Bend cooling fins as shown in step 3.

Use Allen key to adjust cooling fins.

866-590-3533 support@superbrightleds.com

H4/H7*

Install lamp in correct direction.

Notice: Lighting pattern is adjustable by rotating lamp body.

Connect plug to socket.

*H7 bulbs may require an additional adapter/retainer on some vehicles. Check vehicle before ordering.

Adhere 3M tape to driver, and install dust cap to finish installation.

866-590-3533 support@superbrightleds.com

H8/H11/H16JP/H13/P13/9004 9005/9006/9007/9012/PSX26

Bend cooling fins as shown in step 3.

Use Allen key to adjust cooling fins.

Install lamp in correct direction.

Connect plug to socket.

866-590-3533 support@superbrightleds.com

H8/H11/H16JP/H13/P13/9004 9005/9006/9007/9012/PSX26

Adhere 3M tape to driver, and install dust cap to finish installation.

Use Allen key to adjust lighting pattern if needed.

866-590-3533 support@superbrightleds.com

H16EU/PSX24

Bend cooling fins as shown in step 3.

Use Allen key to adjust cooling fins.

Install lamp in correct direction.

Connect plug to socket. Adhere 3M tape to flat surface, and install the dust cap to finish installation.

866-590-3533 support@superbrightleds.com

9004/9007

1. Remove hex key screw holding mounting flange to bulb, then slide flange off of bulb.

2. Align three ears on original retainer with three notches on flange and slide.

3. Re-insert bulb into flange then reinstall hex key screw.

4. Install bulb into headlight housing and rotate to adjust beam angle. Lock retainer in place when desired angle is achieved.

*Note: Some Ford models may require the retainer to be trimmed to clear heat sink on bulb.

Retainer* (not included)

Flange

866-590-3533 support@superbrightleds.com

PRODUCT SPECIFICATION

Input Power	26W ± 10%
Operating Voltage	DC9~32V
Luminous Flux	L/4000LM, H/4000LM
IP Rate	IP65
Color Temperature	6500K
Heat Dissipation Theory	Aircraft aluminum 6063
Operating Life	>30000hrs
Operating Temperature	-40°C ~ +80°C

866-590-3533 support@superbrightleds.com

TROUBLE SHOOTING

Light Won't Turn On	<ul style="list-style-type: none">Check to make sure all wire connections are secure and fuses are functioning.If only one side functions, swap bulbs to determine location of issue.
High Beam/Low Beam are Opposite	<ul style="list-style-type: none">Your vehicle may require a warning canceller to prevent this from happening. Visit www.superbrightleds.com for compatible warning cancellers
Flicker or "Bulb Out" error Message	<ul style="list-style-type: none">Your vehicle may require a warning canceller to prevent this from happening.

For questions, concerns, or for more installation tips visit superbrightleds.com

866-590-3533 support@superbrightleds.com

SAFETY AND NOTES

- Product shall be installed and serviced by a qualified technician.
- LED head light replacements are waterproof when used in an approved headlight housing assembly.
- Good heat dissipation will prolong the working life of the driver, ensure good ventilation.
- Check voltage of the vehicle to be sure it complies with working voltage of the product. (9~32 VDC)
- Ensure all wire connections and polarities are correct before applying power to avoid any damages to LED lights.
- If a fault occurs, return product to Super Bright LEDs. Do not attempt to repair this product by yourself.

866-590-3533 support@superbrightleds.com

WARRANTY SERVICE

1. A Lifetime Warranty is given from the date of purchase to the original purchaser. The warranty is for free repair or replacement and covers manufacturing faults only. Labor costs are not covered by warranty.

2. Warranty exclusions:

- Any damages caused from improper operation or connecting voltages other than 9~32 VDC.
- The product appears to have excessive physical damage.

3. Repair or replacement as provided under this warranty is the exclusive remedy to the customer. We shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.

WARRANTY LIFE TIME

866-590-3533 support@superbrightleds.com

COMPONENT DETAILS

Lamp Body

Locking Ring

Cooling Fins

Driver

Plug