Super Bright LEDs, Inc. 4400 Earth City Expressway Earth City, MO 63045 tel: 866-590-3533 email: support@superbrightleds.com



Instruction/Installation Manual



Retrofit: LED Tube Lamp – 4ft. Fluorescent T8/T10 Replacement



SECTION 1 - General Information

Kit components: 1-LED Tube, 1-Label and 1-Set of Instructions

Models were only evaluated for factory installation to end luminaire, or to end Retrofit Luminaire, intended to replace a fluorescent lamp where it is necessary to modify the luminaire. These LED Tube Lamps are intended to retrofit a maximum of four lamps, mount fluorescent luminaries that use straight tubular 4-foot lamps.

- These lamps should be installed by a licensed electrician.

- These lamps operate at line voltage and require all ballasts to be removed before the bulb is to be installed in the luminaire.

- These lamps are to be used in dry or damp locations only. Do not use in wet locations.

- These lamps are not to be used with a light dimmer. Any ballasts need to be bypassed.
- Always connect ground lead to luminaire where applicable.

- Please contact **superbrightleds.com** if you have any questions not addressed in these instructions. Please see contact information on the last page.

SECTION 2 - WARNING



THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

These lamps can be used in any standard T8 lamp luminaire, allowing for its minimum spacing requirements





WARNING - Risk of fire or electric shock. Retrofit kit installation requires knowledge of fluorescent lighting luminaires electrical systems. If not qualified, do not attempt installation, contact a qualified electrician.

WARNING - Risk of fire or electric shock. The electrical rating of this product is AC100V~277V, the installer must determine whether they have AC100V~277V at the luminaire before installation.

WARNING - Risk of fire or electric shock. Only install this kit in fixtures it was designed for as shown by the dimensions and images.

WARNING - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

WARNING - THE RETROFIT ASSEMBLY IS ACCEPTED AS A COMPONENT OF A FLUORESCENT LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY UL OR AUTHORITIES HAVING JURISDICTION.

Note: Shunted lamp holders are found only in fluorescent luminaires with Instant-Start ballasts. Instant-start ballasts can be identified by the words "Instant Start" or "I.S." marked on the ballast. This designation may be in the form of a statement pertaining to the ballast itself, or may be combined with the marking for the lamps with which the ballast is intended to be used, for example F40T12/IS.



Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

Not for use with dimmers.

Once installation is completed the luminaire has been modified and can no longer operate the originally intended lamp.

Caution - risk of electric shock - use in dry and damp locations only.

Risk of electric shock - do not use where directly exposed to water.

This device is not intended for use with emergency exit fixtures or emergency exit lights.

DANGER-RISK OF ELECTRIC SHOCK DISCONNECT POWER BEFORE INSTALLATION

Super Bright LEDs, Inc. 4400 Earth City Expressway Earth City, MO 63045 tel: 866-590-3533 email: support@superbrightleds.com



SECTION 3 - Installation Instructions



01 Application of Power to LED Tube

Input Voltage: AC100-277V 50/60Hz





Power must be applied to the endcap labeled "AC INPUT", applying power to wrong end will cause a direct short of the AC power when turned on.

02 Retrofit Steps

- a.) Determine if the fixture has an electronic or magnetic ballast. For electronic ballasts use retrofit method "A1". For magnetic ballasts use method "B1".
- b.) Before restoring power after retrofit, use wire nuts to cover exposed end of any wires cut and not removed during retrofit procedure.

A1 Retrofit luminaire with electronic ballast





Remove diffuser (if applicable) and fluorescent lamp. Cut off all wires which are connected to ballast.

Choose the wiring method that best suits the fixture



Wires on one end (socket) of luminaire – Connect Line and Neutral to "AC INPUT" according to the figure above (LED tube will not be damaged if "L" and "N" are reversed) Super Bright LEDs, Inc. 4400 Earth City Expressway Earth City, MO 63045 tel: 866-590-3533 email: support@superbrightleds.com



B1 Retrofit luminaire with magnetic ballast





Remove diffuser (if applicable) and fluorescent lamp. Cut off all wires which are connected to ballast. If wiring as shown below in method "2", cut wires to starter.

Choose the wiring method that best suits the fixture



Wires on both ends (sockets) of luminaire – Replace standard starter with short circuit starter supplied with LED tube

03 Complete Installation

Included label, as shown to the right, must be affixed to modified fixture in a location easily seen when replacing lamp. Notice: This luminaire has been modified and no longer operates Fluorescent Lamps. Ballast(s) have been disconnected Use only Super Bright LEDs,Inc Models T8-CW18W-C4F,T8-NW18W-C4F or T8-WW18W-C4F LEDTube lamps for lamp replacement. TEL:866-590-3533 E-MAIL:support@superbrightleds.com WEB:superbrightleds.com

and Neutral to "AC INPUT" according to the figure above (LED tube will not be damaged if "L" and "N" are reversed)

The Kit, Replacement Label, and Installation instructions are provided with the LED Tube.

Website: superbrightleds.com Tel: 866-590-3533 Fax: 314-972-6202 Email: support@superbrightleds.com Address: Super Bright LEDs, Inc., 4400 Earth City Expressway Earth City, MO 63146, USA