

Important: Read all instructions prior to installation.


2007-2013 Chevy 1500 20" Single-Row Light Bar Mount

Parts Included

1 - Light Bar Mounting Bracket

Tools & Supplies Required

- 10mm Socket
- Flat-Head Screwdriver

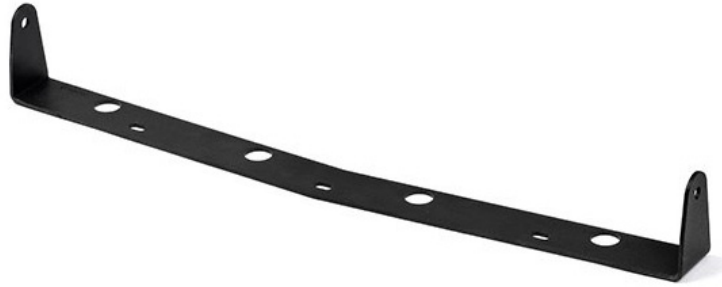

Important

Please read instructions before beginning installation. Check the kit hardware against the kit contents. Be sure you have all the needed parts and know where they go. This bracket is designed to fit a 20" single-row LED light bar.

Application

Only fits **Chevrolet 1500 2007-2013** models.
Does not fit 2007 classic models.

Installation Instructions

1. Using a 10mm socket, remove the 3 bolts behind bumper opening.
2. Remove push pins holding rubber air flap. Push flap down and save push pins for reinstallation.
3. Place bracket through opening in bumper. Reinstall the 3 factory bolts (Do Not Tighten).
4. Install Light Bar in bracket through opening in bumper using supplied hardware that came with your Light Bar.
5. Make sure light and bracket are centered in bumper, and tighten the 3 bolts holding the bracket.
6. Replace rubber air flap and push pins.
7. Set desired light bar angle, and tighten bolts.
8. Refer to the wiring harness instructions for electrical connections.

Dimensions

NOTE: THE DIMENSIONS FOR THIS PRODUCT ARE FOR REFERENCE ONLY. SOME BRACKETS ARE ABLE TO SHIFT TO DESIRED POSITION WHEN INSTALLED. USE BRACKETS WITH FIXTURE TO MARK HOLES BEFORE DRILLING.

