


# Load Resistor Installation Instructions

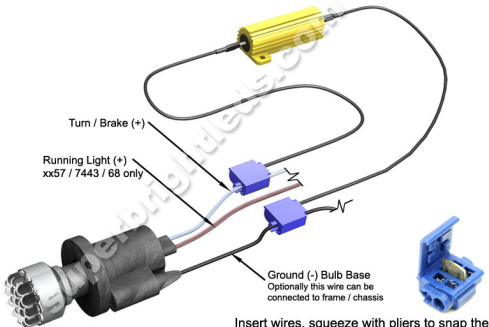

Insert wires, squeeze with pliers to snap the splice taps shut - **DO NOT** cut your vehicle wires

- Use 2 Load Resistors if installing LED bulbs in turn signals in front **only** OR rear **only** (one per LED turn signal bulb)
- Use 4 Load Resistors if installing LED bulb in turn signals in front AND rear (one per LED turn signal bulb)

**WARNING:** Load Resistors heat up like a lightbulb. Must be installed to make no contact with paint or plastic.

**superbrightleds.com**

©2007 Super Bright LEDs, Inc - St. Louis, Missouri  
tel:314.972.6200 fax:314.972.6202  
superbrightleds.com