


Important: Read all instructions prior to installation.

Plug-In Digital Timer

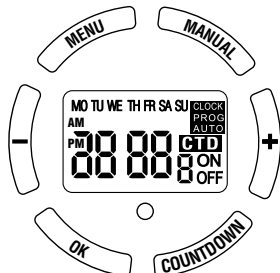

Button	Function
MENU	shifts between CLOCK and PROG (program) modes
+	increases number or move through settings
-	decreases number or move through settings
MANUAL	shifts between ON, OFF, AUTO/ON, and AUTO/OFF modes
OK	confirms with the current settings
COUNTDOWN	unused
RESET	resets the timer to default settings (small button under display)

Safety and Notes

- Product should be installed and serviced in accordance with applicable national, state, and local building and electrical codes.
- Risk of electrical shock, injury, or death—always use with a properly grounded outlet. Do not attempt to defeat this feature.
- Risk of fire—Do not use timer to control devices that require direct supervision and could result in dangerous or hazardous conditions due to inaccurate timing, such as sun lamps, saunas, heaters, crock pots, etc.
- Risk of electrical shock—Timer contains a pre-installed battery backup. If maintenance is required, do not attempt to replace battery without first removing supply power. Dispose of any old batteries in compliance with all applicable regulations.
- Do not exceed maximum load as shown on timer.

General Setup / Use

Before beginning to adjust settings, plug the timer in and hold the reset button for approx. ten seconds to ensure the timer is at factory default settings before use. Timer will return to main menu if no input is made for one minute at any time during programming or if the MENU button is held down for 2 or more seconds.

Programming Settings

Setting Date/Time

- With supply power on, press the MENU button once. CLOCK should be illuminated in the top right corner of the screen.
- Next, press the OK button to enter day of the week selection. Use the +/- buttons to select the correct date. Press OK to confirm selection.
- The hour should now be flashing. Use the +/- buttons to adjust to the correct hour (cycle through to go from AM to PM). Press OK to confirm, then repeat the process for minutes.

Setting Programs

Timer can store information for up to 9 programs, with independent ON and OFF settings for each program.

- With supply power on, press the MENU key until you reach the desired ON or OFF setting. Each pair of ON and OFF settings (e.g. 1ON and 1OFF) will need to be set to work together for proper operation.
- Press the OK button to enter programming for the selected setting.
- Use the +/- buttons to cycle through day settings and press OK when the desired setting is displayed.

Day Settings:

MO, TU, WE, TH, FR, SA, and SU (full week)
 MO, TU, WE, TH, FR, SA, or SU (individual days)
 MO, TU, WE, TH, and FR (weekdays only)
 SA and SU (weekend only)

- Select the hour (cycle through to go from AM to PM) using the +/- buttons, then press OK.
- Select the minute using the +/- buttons, then press OK to finish programming the setting.
- Press the MANUAL button so that AUTO is displayed on the screen to activate the programmed settings.

Operating Modes

Press the MANUAL button to cycle between operating modes.

OFF - Lights will remain off and set programs will not be activated.

ON - Lights will remain on constantly and set programs will not be activated.

AUTO/ON - Lights are currently on and set programs will be activated.

AUTO/OFF - Lights are currently off and set programs will be activated.



Rev Date: V2 02/10/2020

4400 Earth City Expy, St. Louis, MO 63045

• 866-590-3533

• superbrightleds.com